



F45 Bracket Installation VW T3 Kit

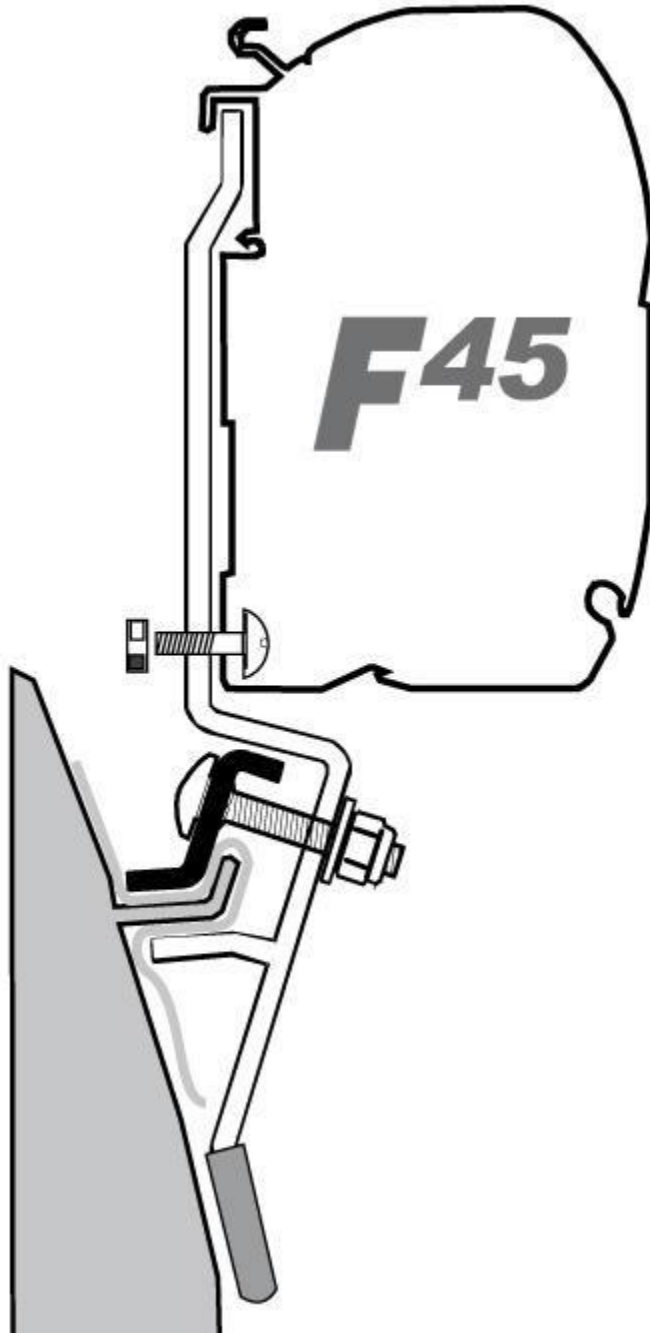

Hardware Included

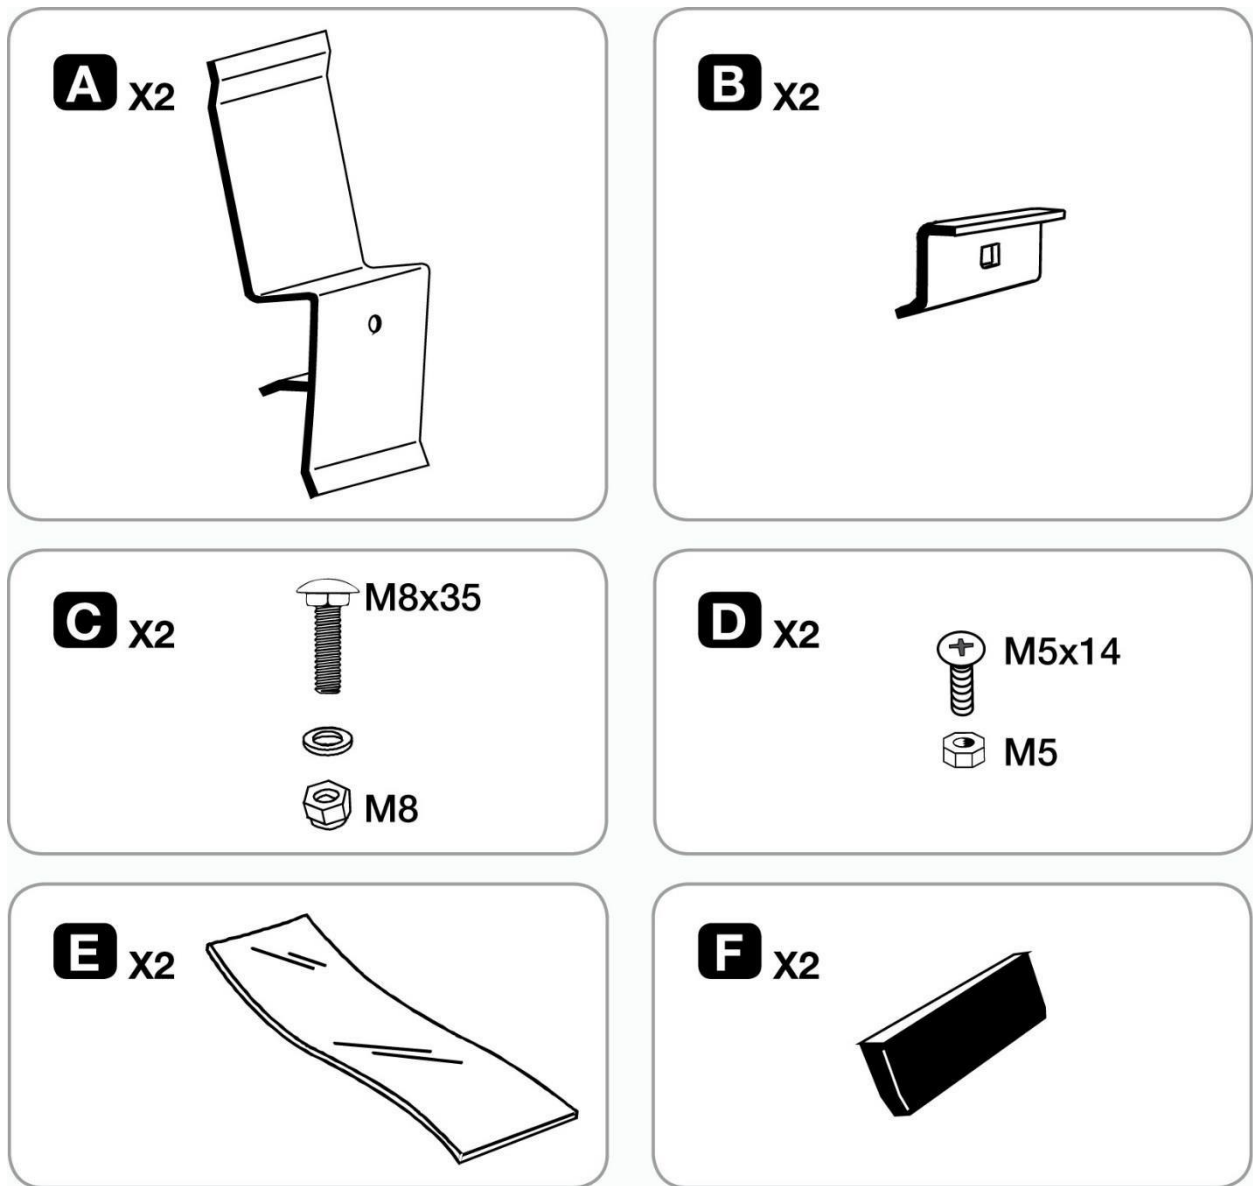


Tools Needed:

13mm wrench
10mm wrench
Phillips Head screwdriver
Power Drill and 5.5mm or 7/32 drill bit



Installation of Brackets on Vehicle

Torque to 10 lb/ft paying attention to the bracket and rain gutter to ensure that neither is starting to bend or deflect. If you notice any bending or deflection, you have gone too far.

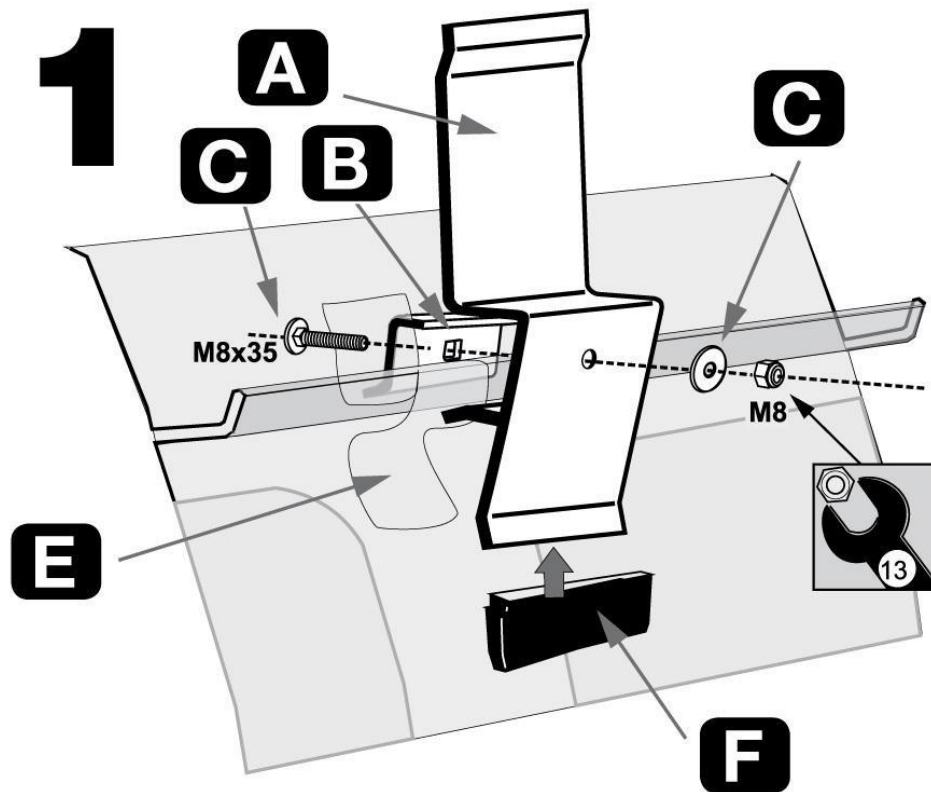

Installation of Awning to Bracket

2

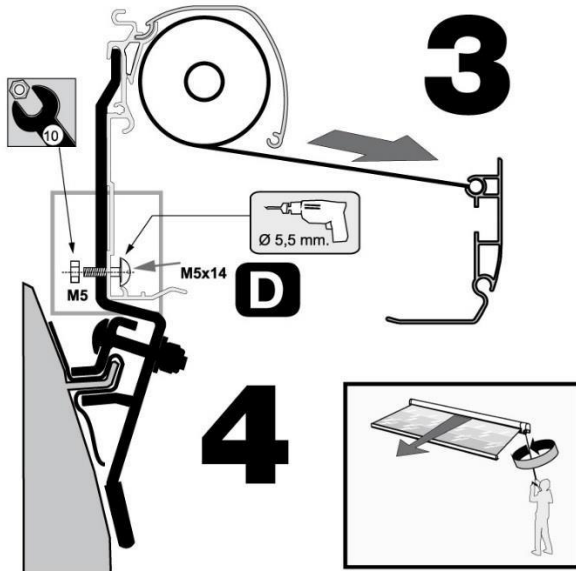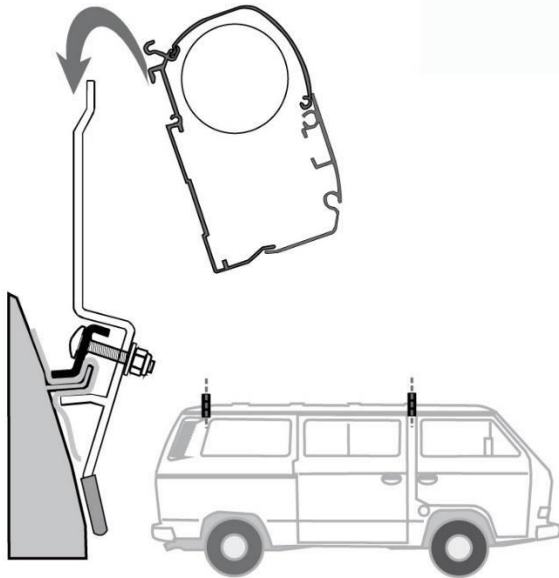

4