

Vanagon Horn Relay

Disconnect the negative battery terminal before beginning installation.

Mount the relay to the left side of the factory horn mounting bracket using the enclosed self tapping screw (see photo). Insert the self-drilling screw through the ring terminal on the long brown wire, then through the hole in the mounting bracket on the relay. The star washer should be installed between the relay mounting tab and the body of the van to provide a good ground connection.

Remove the stock factory wires from the horn by carefully prying upward at the base of the black rubber horn boots. Do not attempt to remove the connectors by pulling on the wires or damage may result.

The Relay Socket has been pre-assembled with dielectric grease to protect the terminals. For best results, apply a thin layer of the enclosed dielectric compound to all remaining connector terminals to prevent oxidation and ensure long lasting electrical connections.


Install the stock factory brown ground wire onto the male tab (inside the white nylon housing) on the short brown wire on the relay harness. The stock rubber horn wire boot you just disconnected from the horn will stretch over the white nylon housing to offer a weather resistant seal.

Install the black/yellow striped stock positive wire onto the male tab (inside the white nylon housing) on the red wire on the relay harness. The stock rubber horn wire boot you just disconnected from the horn will stretch over the white nylon housing to offer a weather resistant seal.

Install the ground wire (long brown wire with black rubber boot) onto the negative terminal on the horn.

Install the positive wire (white with black rubber boot) onto the positive terminal on the horn.

Reinstall the negative battery terminal and test your horn for proper function.

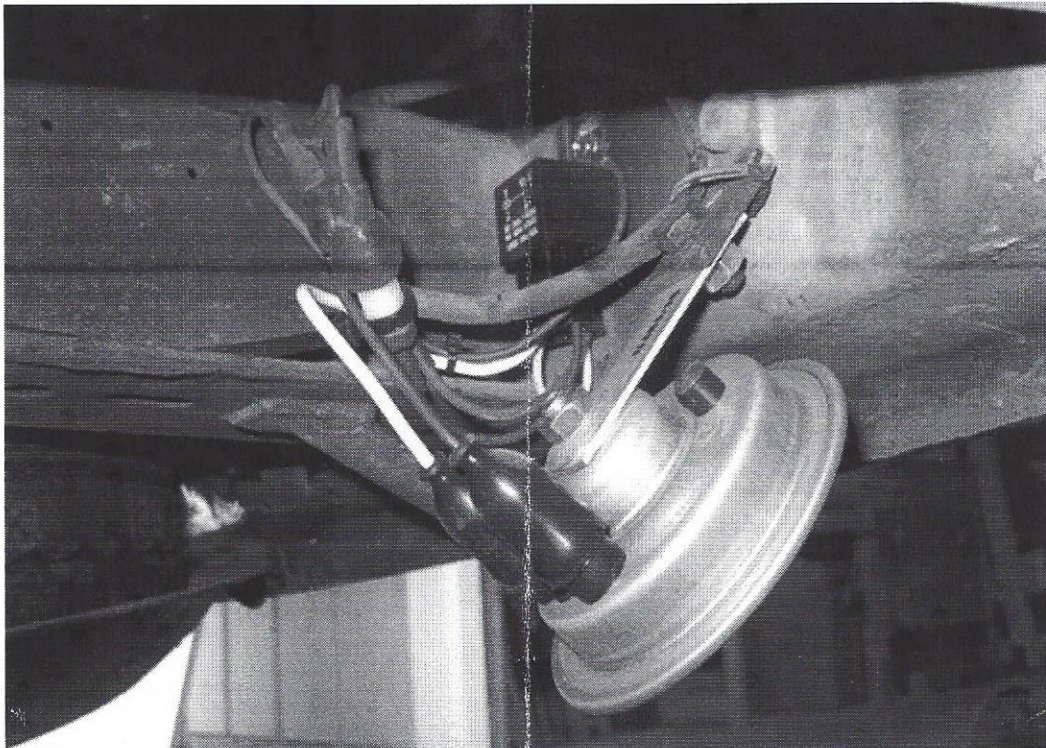

Liability Disclaimer: It is the sole responsibility of the buyer/ installer to ensure that the installation of this product is carried out in a safe manner. If you are not comfortable with the installation of this accessory kit on your own, please consult a qualified automotive electrician. By undertaking installation, the buyer agrees to hold the seller free from liability for any damage that may occur during the installation.

Warranty: All parts are warranted to be free from manufacturing defect for a period of one year from the date of purchase.