

ROOFTOP DECK FILLER PANEL INSTALLATION

INSTRUCTION MANUAL

Thank you for purchasing the Van Cafe Rooftop Deck: Filler Panel. We saw the need to have smaller, lightweight boards to continue the theme of true versatility.

Created in Fort Collins, Colorado, the Van Cafe Rooftop Deck is the product of years of manufacturing expertise. Here at Van Cafe, we are innovators, thinkers, creators, doers and, most importantly, users! We love the outdoors and the idea of sharing experiences and memories with our families, friends, and our customers.

As always, please reach out to us at support@vancafe.com with any questions.

INSTRUCTIONS

1

Install Plank up against inside of corner bracket



2

Test fit filler panel to ensure holes line up with perimeter track and holes in Filler Panel.



3

Insert T-Nuts

- a. Double T-nut inside perimeter track
- b. Single T-nuts in front perimeter track


4

Snap U-clips into Plank

- a. Skip the first outside holes
- b. Insert U-clip in every other slot

5

Stick on rubber pads on bottom side of Filler Panel in between holes where bolts will thread into U-clips, evenly space along where Filler Panel will contact Plank

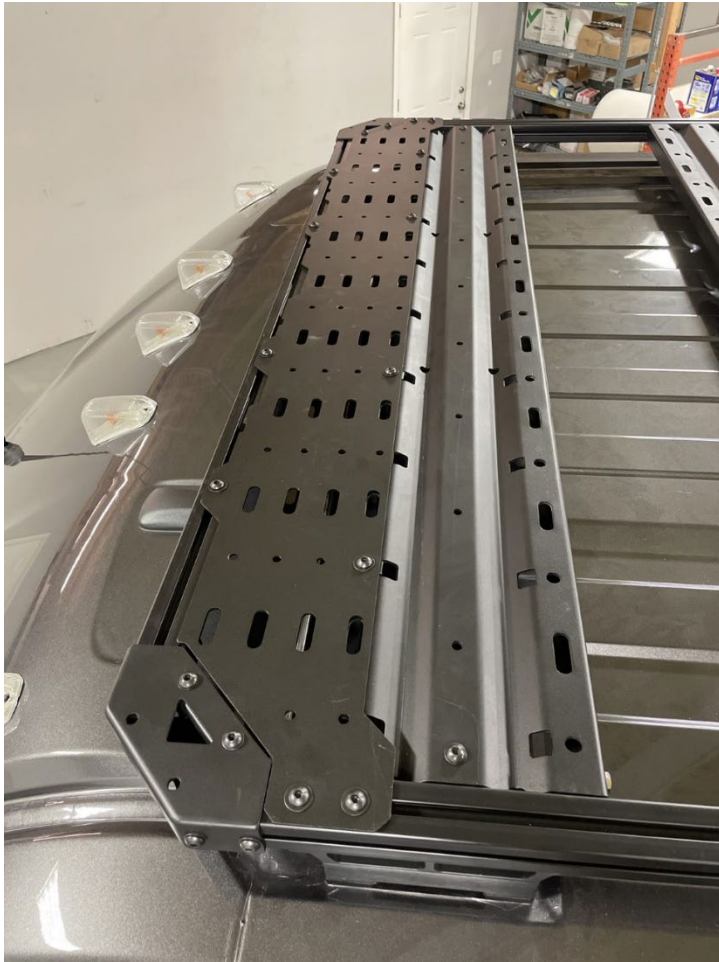

6

Bolt together

- a. Thread M8 x 16 button head bolts through Filler panel into T-nuts inserted into perimeter track
- b. Thread M8 x 20 bolts through Filler Panel into U-clips
- c. Leave bolts loose until all bolts are started

7

YOU ARE DONE! CONGRATS AND ENJOY!